




NM841



NM840



NMR840

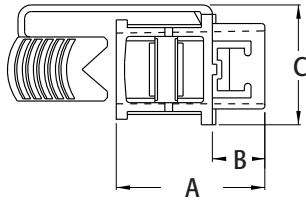

NM842 Works with a wide variety of NM cables including NMB-PCS and Canada's NMD90

Non-Metallic Push In Connectors

For NM and flexible cord. Easy push in installation in a new work box*.

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	TRADE SIZE	KO SIZE	UNIT PKG	STD PKG	DIM A	DIM B	DIM C
NM840	54840	3/8	1/2	100	1000	1.031	.375	.965
NM841	54841	1/2	1/2	50	500	1.340	.475	1.125
NM842	54842	3/4	3/4	25	250	1.510	.475	1.200
NM843	54843	1	1	25	250	1.637	.475	1.500
NM844	50175	1-1/4	1-1/4	10	100	2.085	.475	2.012
NMR840*	14940	3/8	1/2	100	1000	1.030	.375	1.060

MADE IN USA.
E60812 LR49636

Refer to pages C-14 and C-15 for complete cable ranges.
*NMR840 can be installed INSIDE or OUTSIDE an installed box, in RETROFIT or NEW WORK.

INSTALLATION INSTRUCTIONS



1
Disconnect electrical power.
Push the connector into knockout.



2
Install required cables or cords.




3
Place wedge in connector slot and lock tight with a pair of pliers. Tightened wedge provides strong, positive grip.

NMR840 RETROFIT INSTALLATION INSTRUCTIONS (Inside Box)



1
Feed cable through the knockout, then into the connector.

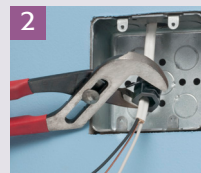

2
Insert wedge in the slot in the connector. Lock tight with pliers.



3
Push assembly into box.



4
Done!