

Non-Metallic Push In Connectors

For NM and flexible cord. Easy push in installation in a new work box\*.

CATALOG NUMBER	UPC/DCI/NAED MFG #018997	TRADE SIZE	KO SIZE	UNIT PKG	STD PKG	DIM A	DIM B	DIM C
NM840	54840	3/8	1/2	100	1000	1.031	.375	.965
NM841	54841	1/2	1/2	50	500	1.340	.475	1.125
NM842	54842	3/4	3/4	25	250	1.510	.475	1.200
NM843	54843	1	1	25	250	1.637	.475	1.500
NM844	50175	1-1/4	1-1/4	10	100	2.085	.475	2.012
NMR840*	14940	3/8	1/2	100	1000	1.030	.375	1.060



Refer to pages C-14 and C-15 for complete cable ranges. \***NMR840** can be installed INSIDE or OUTSIDE an installed box, in RETROFIT or NEW WORK.

INSTALLATION INSTRUCTIONS



Disconnect electrical power. Push the connector into knockout.



Install required cables or cords.




Place wedge in connector slot and lock tight with a pair of pliers. Tightened wedge provides strong, positive grip.

NMR840 RETROFIT INSTALLATION INSTRUCTIONS (Inside Box)



Feed cable through the knockout, then into the connector.

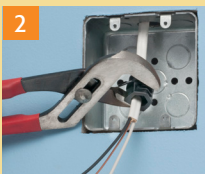

Insert wedge in the slot in the connector. Lock tight with pliers.



Push assembly into box.



Done!




NM841



NM840



NMR840

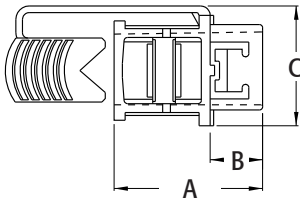

NM842 Works with a wide variety of NM cables including NMB-PCS and Canada's NMD90