




# Arlington Industries, Inc.

1 Stauffer Ind. Park - Scranton, Pa. 18517  
800-233-4717 570-562-0646  
www.aifittings.com - E-MAIL : sales@aifittings.com  
Manufacturers of Quality Electrical Products

**WARNING: TURN OFF POWER AT  
MAIN PANEL BOX**

## Installation Instructions For : IN BOX™ DBHM1C & DBHM1W - STUCCO / MASONRY STYLE


Step #1

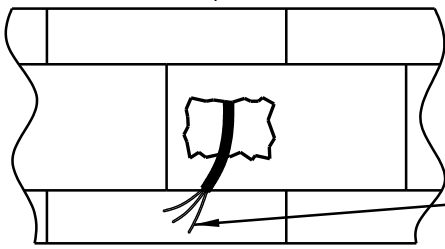

1. Cut Hole in Block.  
Pull Wiring.


Lead Wires  
9" Long

Step #2

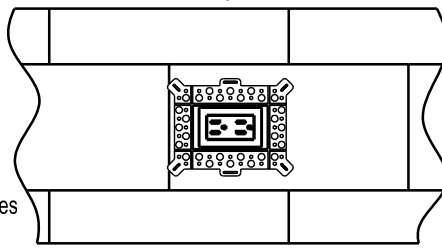

2. Fasten Recessed Box to Block with  
Masonry Fasteners. Wire Device \*


Step #3

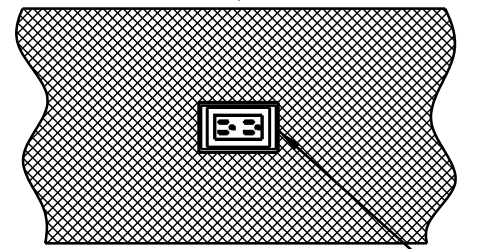

3. Mud Stucco Completely Around  
Flange Area. Caulk As Needed

## Installation Instructions For : IN BOX™ DBHS1C & DBHS1W - VINYL SIDING VERSION


Step #1

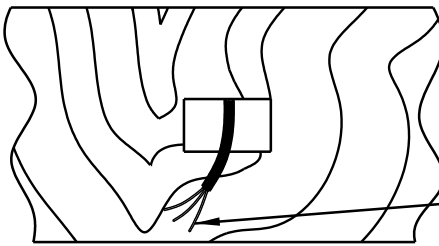

1. Cut Hole in Substrate. Pull Wiring.


Lead Wires  
9" Long

Step #2

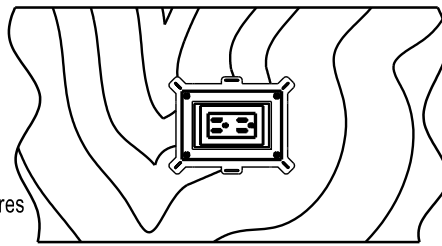

2. Install Recessed Box. Wire Device \*


Step #3

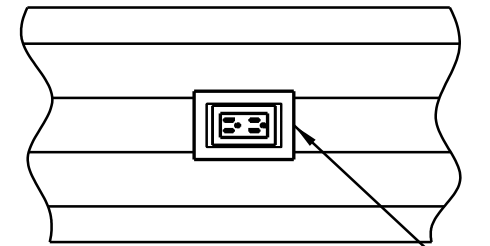

3. Install Siding. Caulk As Needed

## Installation Instructions For : IN BOX™ DBHB1C & DBHB1W - BRICK VERSION


Step #1

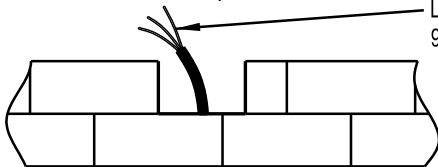

1. Leave Opening in Brick.

Lead Wires  
9" Long


Step #2

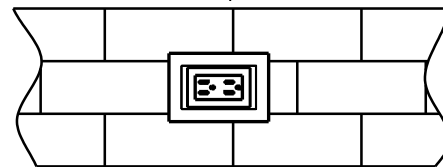

2. Install / Mortar Recessed Box in Place. Wire Device \*

## Installation Instructions For : IN BOX™ DBHR1C & DBHR1W (For: RETRO FIT STEPPED SIDING)


Step #1

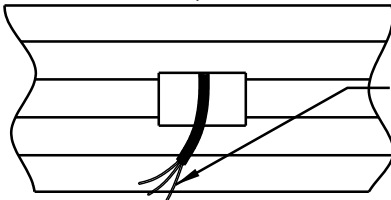

1. Cut Hole in Siding & Substrate. Pull Wiring.


Lead Wires  
9" Long

Step #2

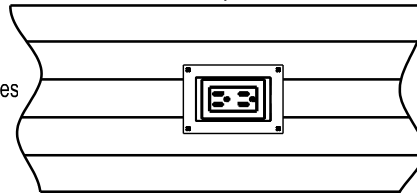

2. Install Recessed Box with Stainless Screws  
Provided. Wire Device \*

Step #3

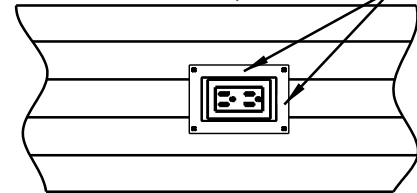


3. Caulk As Shown.

Caulk between  
Flange and  
Siding (4 sides)

## (For: RETRO FIT FLAT SIDING / T111)


Step #1

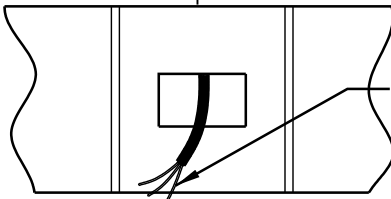

1. Cut Hole in Siding & Substrate. Pull Wiring.


Lead Wires  
9" Long

Step #2

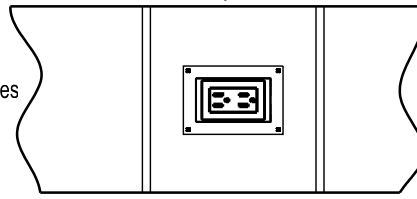

2. Install Recessed Box with Stainless Screws  
Provided. Wire Device \*

Step #3

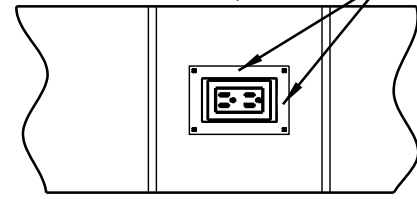

3. Caulk As Shown.


Caulk under  
entire Flange  
Surface



\* Note: Connect the Wires and Install the Device according to manufacture's instructions and Local and National Electrical Codes.  
If you have any questions or if parts are missing, Please call our Customer Service Department at 1-800-233-4717. Do not call or return this product to your local store or distributor.



Method #1

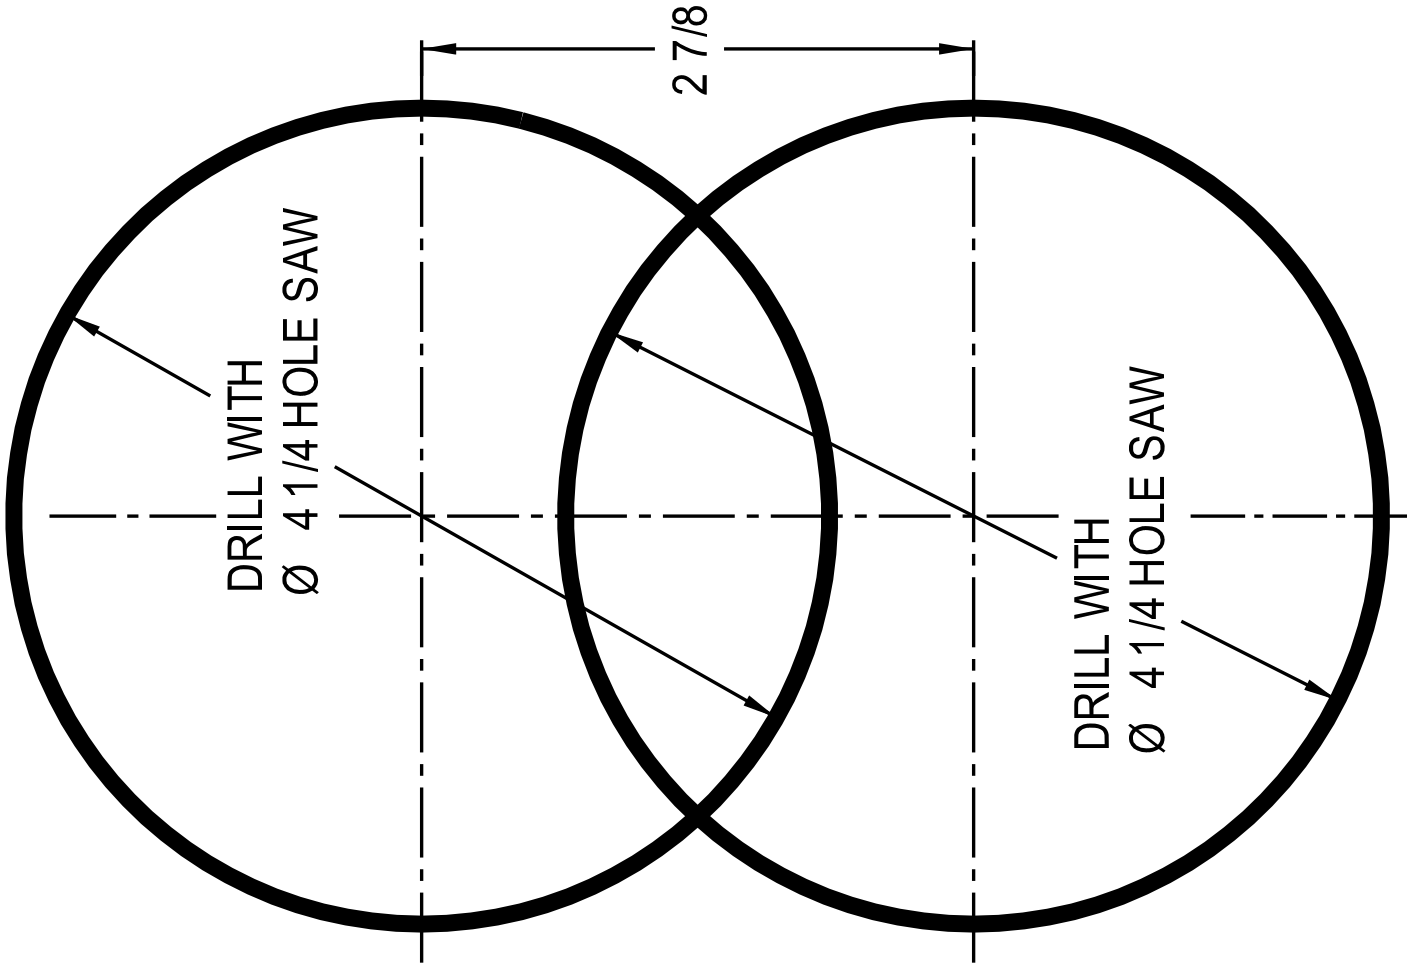

Method #2

## TEMPLATE

CUT HOLE IN SUBSTRATE OR SIDING

