

# Installation Instructions For : DVFR2

Listed for Use for Power and Low-Voltage Applications for New or Existing Construction  
(Such as Antenna, Phone and Cable TV)

**WARNING: TURN OFF POWER AT MAIN PANEL BOX**




If you have any questions or if parts are missing, Please call our Customer Service Department at 1-800-233-4717. Do not call or return this product to your local store or distributor.


## For NEW Construction:

1. Insert (2) #8 x 3" Long Screws Through Angled Holes Located In Outer Section of Box (See Sketch).
2. Mount Box Section to Stud with Box Position Allowing For Wall Finish Thickness.
  - Install NM Cable Connector.
  - Pull Wires.
3. Install Low Voltage Divider If Low & High Voltage is to be Used.
4. After Wall Surface is Complete, Wire Receptacle, Low-Voltage Devices and Attach Trim Plate and Cover Plate.
5. Tighten (4) 'Flag' Screws.

Flag Screws

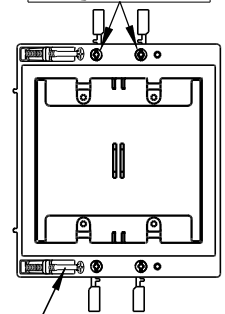

#8 x 3" Screws

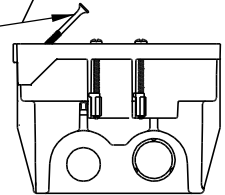

## For EXISTING Construction:

1. Attach Trim Plate to Box, using (4) #6 x 1/2" long Screws.
2. Cut 5-1/4" Wide x 6" High Hole In Finished Wall to Mount Box.
3. Pull Wire and Install Wires into Box.
4. Install Low Voltage Divider If Low & High Voltage is to be Used.
5. Install Box in Opening by Tightening the 'Flag' Screws through the Trim Plate.
6. Wire Receptacle, Low-Voltage Devices and Attach Cover Plate

**WARNING:** Make sure power is OFF at main panel box before installing.

**NOTE:** All Wiring Must be According to NEC, State and Local Codes.