


# INSTALLATION INSTRUCTIONS

For EMT50 - EMT400 Insulating Bushings:

Tap onto end of conduit using a hammer and a piece of wood to position the insulating bushing into place as illustrated below.

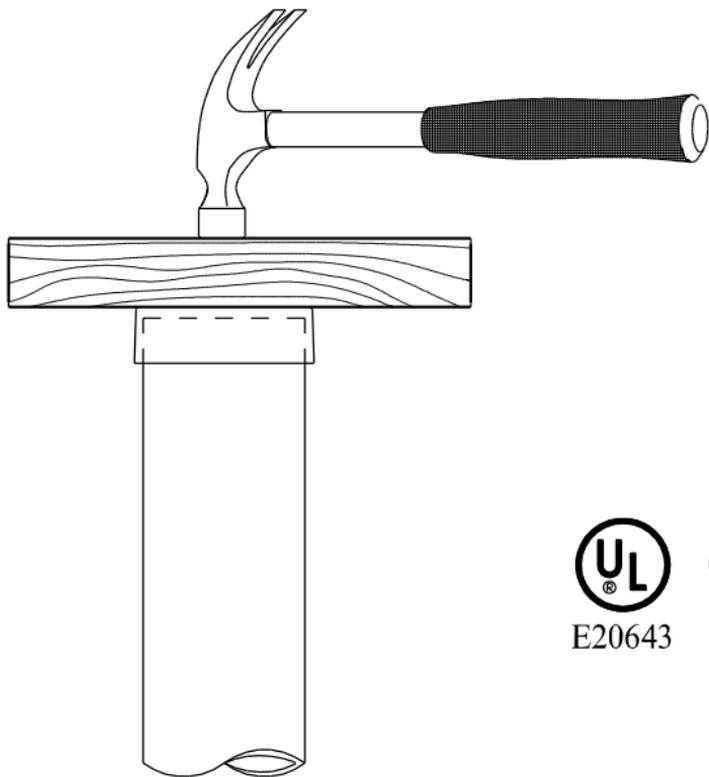

E20643



49636