




Arlington Industries, Inc.
 1 Stauffer Ind. Park - Scranton, Pa. 18517
 800-233-4717 Fax: 570-562-0646
 www.aifittings.com - E-MAIL: sales@aifittings.com
 Manufacturers of Quality Electrical Products

TVBRA2K
TVBRA2KGC(w/ Ground Clip)



Installation Instructions For: TVBRA2K Pre-Wired TV Bridge for Flat Screen Televisions

Fully Assembled
 Box with pre-wired
 Receptacle

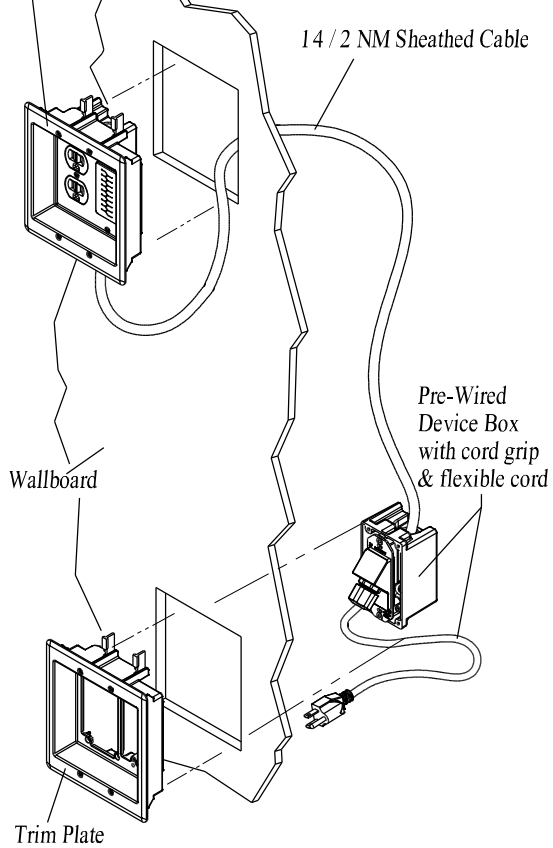

Step #1


CAUTION: Before cutting holes, locate the position of framing members and other possible obstructions

- *Cut (2) 5-1/4" wide X 5-7/8" high holes in wall locating the top hole in desired location for TV.
- *Locate the bottom hole directly below the top hole, close to an existing electrical outlet.
- *Drop the pre-wired Device Box Assembly & 14 / 2 Sheathed Cable thru top hole & feed down toward bottom hole.

Note:

- *This product is not designed to be an extension of a structure's hard wiring.
- *Components are not energized until the flexible cord is plugged into an existing outlet or surge protector.
- *Follow all instructions, do not plug in the flexible cord until installation is complete.


Flag Screws

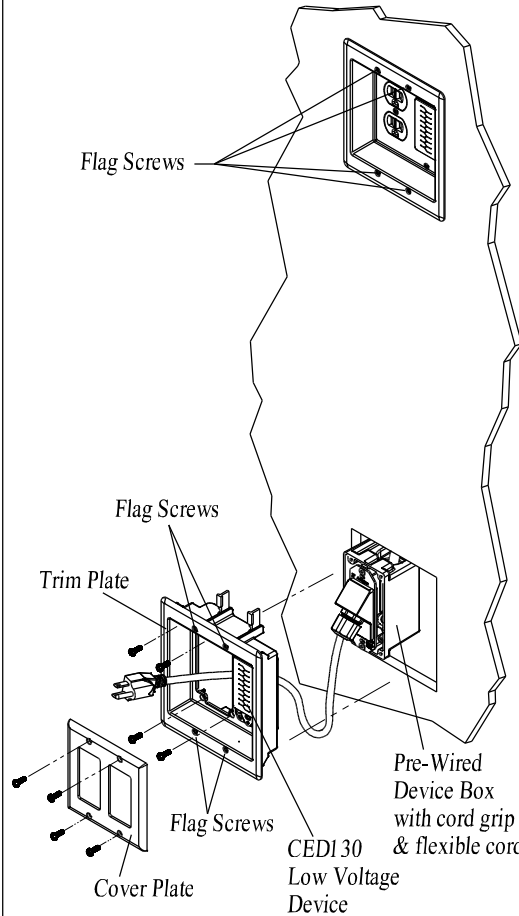

Step #2

- *Position & secure top box to wall by tightening (4) Flag Screws. (see illustration)
- *Pull Flexible Cord & Device Box thru bottom hole & continue to pull Flexible Cord thru Trim Plate.
- *Attach Device Box to Trim Plate with (4) screws provided & secure Trim Plate to wall by tightening (4) Flag Screws.
- *Install CEDI 30 Low Voltage Cable Entry Device as shown.
- *Attach Cover Plate to Trim Plate using (4) screws provided.

Outlet for TV

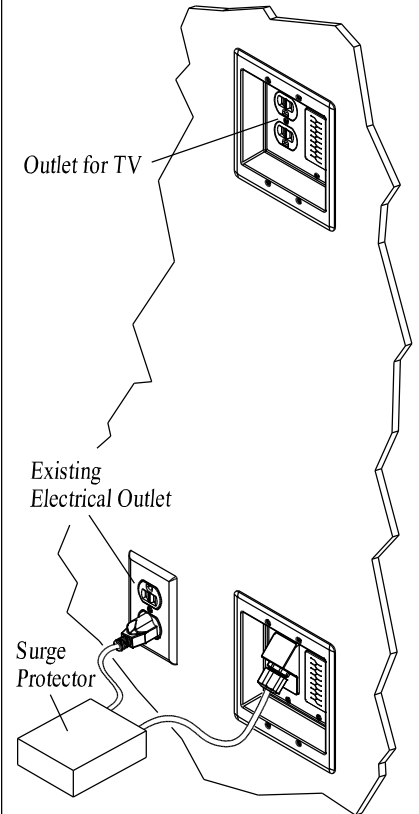

View of Completed Installation of
 TVBRA2 Pre-Wired TV Bridge

Step #3

- *Energize TVBRA2K Pre-Wired TV Bridge by plugging into existing outlet or surge protector.

If you have any questions or if parts are missing, please call our Customer Service Department at 1-800-233-4717.
 Do not call or return this product to your local store or distributor.