

Installation Instructions For: TVBU507

Listed for Use for Power and Low-Voltage Applications for New or Existing Construction
(Such as Antenna, Phone and Cable TV)

WARNING: TURN OFF POWER AT MAIN PANEL BOX




If you have any questions or if parts are missing from your TVBU507, Please call our Customer Service Department at 1-800-233-4717. Do not call or return this product to your local store or distributor.

For NEW Construction:

1. Insert (2) #8 x 3" Long Screws Through Angled Holes Located In Outer Section of Box (See Sketch).
2. Mount Box Section to Stud with Box Position Allowing For Wall Finish Thickness.
 - Install NM Cable Connector.
 - Pull Wires.
3. After Wall Surface is Complete, Wire Receptacle, Low-Voltage Devices and Attach Trim Plate and Cover Plate.
4. Tighten (4) 'Flag' Screws.

For EXISTING Construction:

1. Cut 7-1/8" Wide x 6-1/8" High Hole In Finished Wall Surface.
(Box Section of TVBU507 Can Be Used as a Template if Desired)
2. Attach Trim Plate to Box, using (4) #6 x 1/2" long Screws.
3. Pull Wire and Install Wires into Box.
4. Install TVBU507 in Opening by Tightening the 'Flag' Screws through the Trim Plate.
5. Wire Receptacle, Low-Voltage Devices and Attach Cover Plate

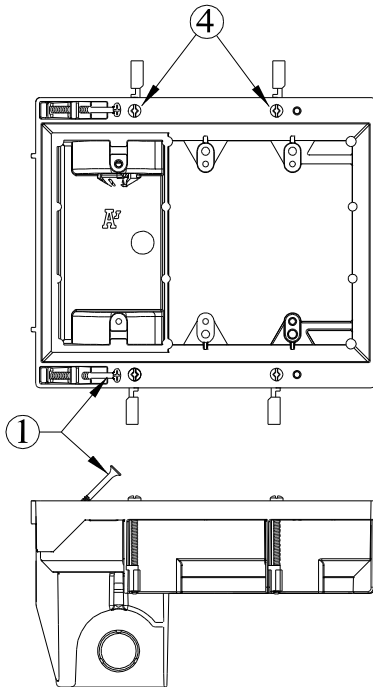

WARNING: Make sure power is OFF at main panel box before installing.
NOTE: All Wiring Must be According to NEC, State and Local Codes.