## Non-metallic Fixture Box for Brick or Stone

# Teverse

# Adjusts to fit 1-1/2" to 5" thick exterior wall finish



Includes box, flange, face plate four #6 x 1/2" screws.

Includes box, flange, face plate, four #6 x 1/2" screws, four #8 x 1-1/4" screws, NM94 cable connector

IN for brick.
OUT for thicker stone...



Catalog<br/>NumberUPC/DEI/NAED<br/>Mfg. #018997Description<br/>Non-metallic Adjustable Fixture BoxUnit<br/>PkgStd<br/>Pkg8141ALP10767For fixtures up to 10 lbs.<br/>Fits 1-1/2" to 5" thick exterior wall finish.11

Patent pending

Installing a fixture (up to 10 lbs) on new brick or stone just got easier with Arlington's new adjustable depth fixture box!

Installation is fast and easy – it looks great too.

Start the installation by determining the thickness of the stone or brick.

The **8141ALP** fixture box adjusts to fit an exterior wall finish from 1-1/2" to 5" thick.



Adjust the box to the proper depth, mount the assembly to the substrate. Add the face plate after the brick or stone is mortared in.

Adjustment screw slots level the face plate, so it's always perfectly vertical on the wall. It stays clean too!

#### 8141ALP...

- For fixtures up to 10 lbs
- Versatile depth adjustment for 1-1/2" to 5" thick exterior wall finish
- Easy installation
- Paintable face plate




1StaufferIndustrialPark Scranton,PA18517

800/233.4717 Fax 570/562.0646 www.aifittings.com

## Non-metallic Fixture Box for Brick or Stone

# Adjustable depth • IN for brick, OUT for thicker stone

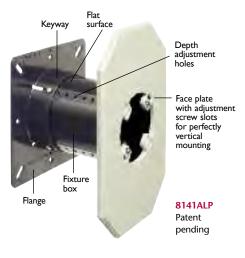



1 Determine the thickness of the brick or stone material, by measuring from the substrate to the front face of the material.



2 Insert the fixture box into the flange, lining up the flat surface with the keyway. This automatically lines up the depth adjustment holes.



3 Adjust the box depth...



4 ...then secure the box by tightening the four 1/2" screws provided.



5 Locate the position of the hole, and cut it out with a 4-1/8" hole saw. Pull the cable through the installed NM cable connector.

Distributed by




1 Stauffer Industrial Park Scranton, PA 18517 800/233.4717 Fax 570/562.0646 www.aifittings.com



6 Attach the box to the substrate with screws (not provided). At this point it's ready for the installation of the stone or brick.





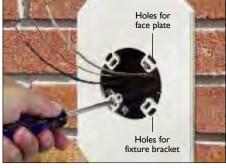

7 After the mortar is dry, attach the face plate to the box with the #8 screws (provided), rotating it so it is perfectly aligned for the fixture installation. Use one set of holes for the face plate, the other set for the fixture bracket.

To finish:

Paint the face plate if desired. Caulk around the outside of the face plate, as required. Install fixture (up to 10 lbs).